



SVS 200 DVD/VCR Combo Installation Instructions

Note that the SVS 200 system was designed to accommodate most DVD/VCR combos (or DVD recorder/players) on the market. The opening is 3-1/2" high by 17-1/2" wide. In the rare instance that a player larger than this may need to be installed, the lockbox and/or other components can be moved down one rack space and a smaller cord wrap panel can be used. Call us if you need a smaller cord wrap panel.

Note that there were two security bits provided in the documentation bag, one for the rear access panel (larger bit) and another (smaller bit) for the components mounted on the front of the system. Remove rear access panel with the larger security bit. Remove combo mounting shelf (if one is present) or security lockbox by removing the screws from the rack rails on the front of the system.

Mount the DVD/VCR combo (or other player) on the shelf (or on top of the lockbox) with supplies provided. Reinstall the combo/player assembly into the system with the rack rail screws. Laying the system on its back side may facilitate mounting the combo/player assembly.

From the rear access, plug video cable (yellow) to projector and combo. Plug audio cable provided into the combo audio out and the amplifier audio in. Plug power cord from the combo/player into the power surge strip. If desired, a component cable may also be connected to the projector.

Check all cables and power cords. Plug the power cord into an electrical outlet and test the system. Secure all cables and power cords with wire ties. Replace back panel and you are ready to use the SVS 200. If you have any questions, call Sound Video Systems at 1(800)724-0236.