


SVS 200 Projector Installation Instructions

Note that there were two security bits provided in the documentation bag, one for the rear access panel (larger bit) and another (smaller bit) for the components mounted on the front of the system. Remove rear access panel with the larger security bit. Remove projector mount and the projector face panel by removing the screws on the front of the system with the smaller security bit. Note the mount adjustment cord configuration and undo from the cleat end. This will allow the mount assembly to be removed.

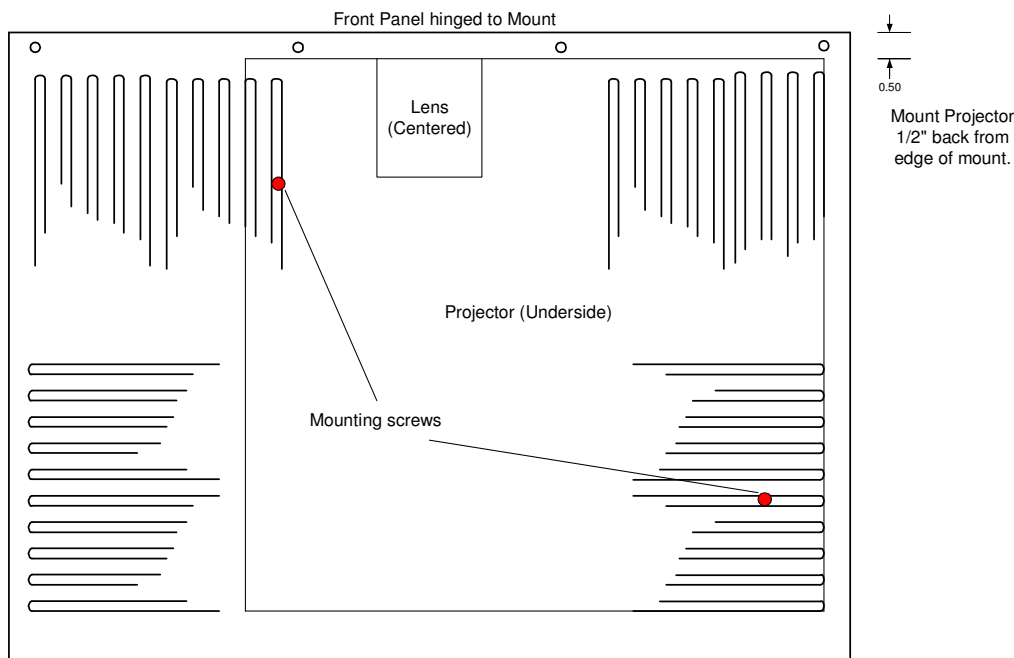

Lay your projector upside down on a flat surface. Place the mount assembly upside down onto the projector and align the projector so that the projector front is 1/2" back from the front edge of the mount and centered so that the lens will align with the opening in the face panel. Using machine screws (and spacers if needed), secure the projector to the mount through the vertical and horizontal slots, with two screws (M4 screws provided – some projector models may require different screws and/or spacers). **UTILIZE SPACERS TO KEEP THE MOUNT PLATE FLAT OR THE PROJECTOR WILL NOT BE LEVEL.** Reinstall projector mount onto rack rails. Laying system on its back side may facilitate mounting the shelf. Reconnect adjustment cord to mount and feed through to cleat. Secure the cord with the cleat. Replace projector face panel.

From the rear access, attach video cable (yellow) to projector and combo. Plug power cord from projector into power/surge strip. Slide cable jacket (provided) over the VGA cable and the laptop audio cable. Audio cable should extend at least 12" longer than VGA cable to allow for easy plugging into your laptop's ports. Tie off cable jacket with wire ties at both ends of the jacket. Feed through the grommet on the top of the system. Plug VGA cable into projector (RGB in) and the audio cable into the amplifier.

The projector menu access panel on the top of the system can be removed and rotated so the projector's menu aligns with the access panel. Moving the projector to a different position on the mount may help aligning the projector's menu with the menu access panel.

Check all cables and power cords. Plug the power cord into an electrical outlet and test the system. Secure all cables and power cords with wire ties. Check that the mount moves up and down freely without cable obstruction. Replace back panel and you are ready to use the SVS 200. If you have any questions, call Sound Video Systems at 1(800)724-0236.

Sound Video Systems
75 Benbro Drive
Buffalo, NY 14225
www.AVRover.com

Toll Free: 800-724-0236
Phone: 716-684-8200
Fax: 716-684-7997