



Software and Driver Installation Instructions

If you do not have Onfinity disk version 2.2 (or higher), go to www.AVRover.com and on the Support page download the most recent version of the software and drivers.

1. On the Support page of the website, click on CM2 Max Drivers. Select 'Open' to extract the files. If this is successful, skip step #2.
2. Select 'Save' and then select the directory you want to save the files to. When finished, click on 'Open Folder', and then open the folder to unzip the files. You should then see 3 files and a 'USB Driver' folder. Click on Setup.exe and follow the installation instructions.
3. Plug the CM2 MAX receiver into your computer with the USB cable provided.
4. Go to Device Manager. (In most versions of Windows you can access it by clicking Start, Control Panel, Systems, and then the hardware tab.)
5. In the Device Manager, you will notice a new USB device (Cygnall USB composite Device).
6. Right click on it and choose 'Update Driver'. (Double Click in some versions of Windows and click on 'Install Driver').
7. Next, look in Device manager under 'Port' for a device named 'CP2101 USB to UART Bridge Controller'. Update this driver also (same as step 6).
8. You are done installing the software and drivers.
9. Click on the Freeclass icon which was generated during the installation to launch the CM2 MAX. You should hear 4 beeps to indicate the correct detection of the CM2 MAX hardware. If the CM2 Max logo does not appear and less than 4 beeps are heard, close out ONfinity and restart the program. Close out ONfinity by clicking on the icon in the system tray and when the menu appears, click on exit.
10. Click on the Onfinity icon (lower right) and select calibration. With the wand, click on the 9 green dots as they appear. When finished, you should hear two beeps and everything is set.